

Clutch Springs How To

By: ITLN650R (www.brp650forum.com)


****Recommend oil change at the same time****

- 1) Drain oil.
- 2) Remove clutch cable from clutch cover (hardest part).
- 3) Take out all bolts on clutch cover.
- 4) Turn lever on clutch cover about 90° counter-clockwise to release the shaft inside the clutch.



- 5) Take clutch cover off.
- 6) There's 5 bolts as shown in the picture, remove them and the springs are behind them as also shown.

Kawasaki Ninja 650R & ER-6N Resource

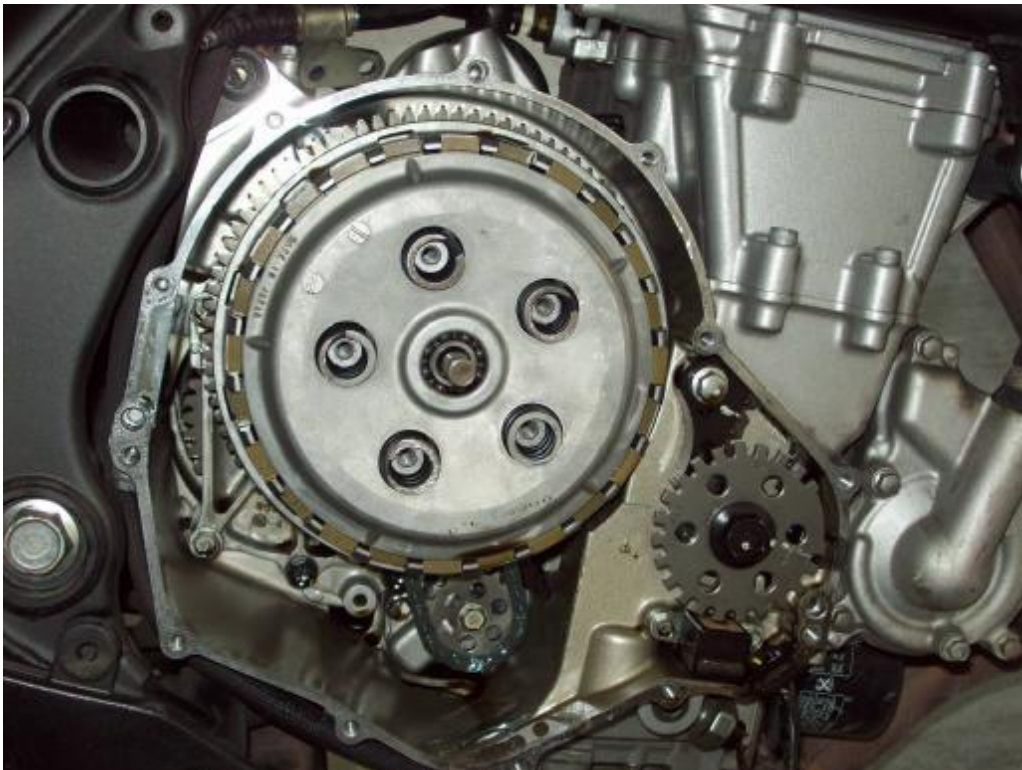

7) Install new springs, and torque bolts to 87 inch pounds.

Kawasaki Ninja 650R & ER-6N Resource



8) Clean mating surface and put a new gasket on, put the clutch cover on (make sure the lever is still 90° to the left).

Kawasaki Ninja 650R & ER-6N Resource

- 9) Put all bolts back in and torque to 87 inch pounds also.
- 10) Put clutch cable back on and adjust as needed.
- 11) Put new oil in and ride like the wind